
PE COLUMN

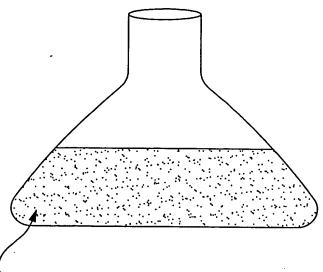

TED TO TON

FIG.8

EITHER

- 1) MIPs FOR MTBE OR
- 2) GAC adsorbent
 MIXED INTO WATER CONTAINING
 500 ppB OF MTBE
 STIRRED FOR 1 HOUR AND THEN
 ANALYZED FOR AMOUNT OF MTBE
 REMAINING IN WATER.

